



NICO 10/20 ASSEMBLY INSTRUCTIONS

THIS PACKAGE CONTAINS:


Tools required: Philips head screw driver.

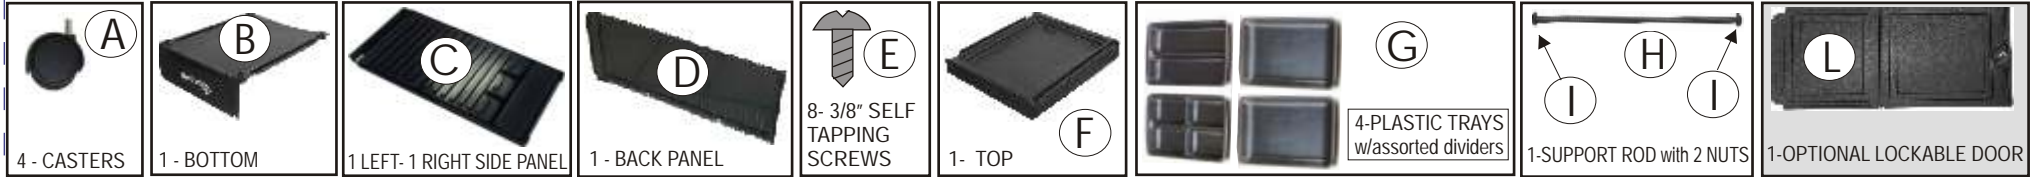


Before you begin please take a moment to read all instructions, we recommend that you select a soft surface to prevent scratching your NICO CART. Remove entire contents from box, ensure that the package contains all the parts required for an hassle free assembly.

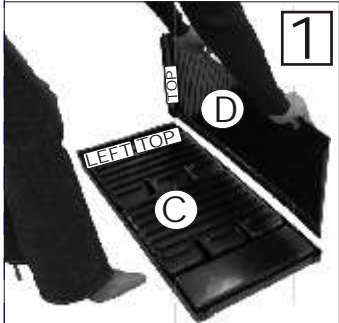


Lay panel marked "LEFT" (C) with the shiny finish facing up. Keep label "LEFT" and "TOP" as shown. Slide back panel (D) into side panel's (C) groove.

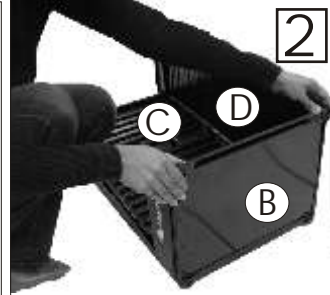


Slide Bottom (B) into side panel's groove.

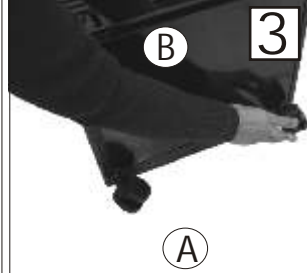

Keep the parts tight together, insert 2 of the 4 casters (A) in the bottom 2 holes, Press firmly until they snap into place.

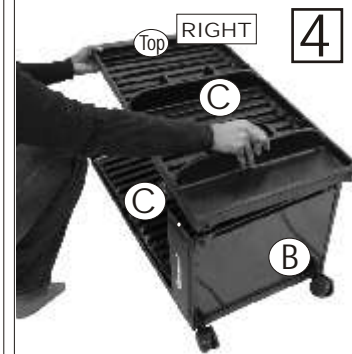


Now insert side panel labeled "Right" (C) & connect to the bottom (B) and back panel (D), insert the other 2 casters (A) in the top 2 holes and press firmly.

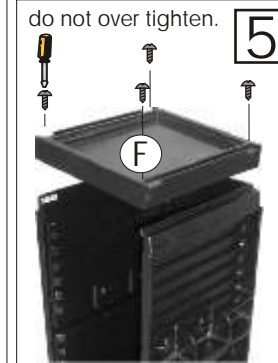


Carefully turn the unit upwards insert Top (F). Secure with 4 screws (E) through pre-drilled holes and tighten.




Secure the back w/2 screws (E) through pre-drilled holes located on the bottom of the unit and tighten.

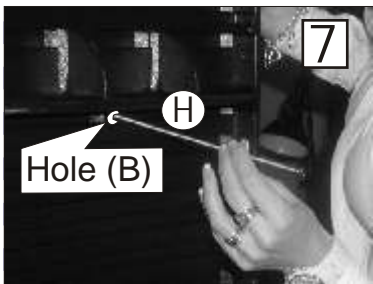


If your trolley is equipped with "Support Rod"(H) mounting holes (B) unscrew one of the two nuts (I) from the Rod and insert Rod into the Side Hole (B) located under the top pockets.

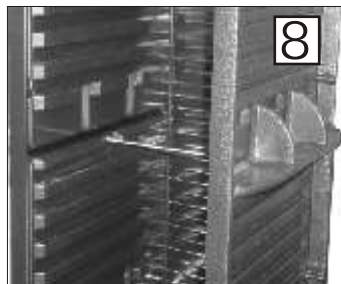

Pass it through the unit and out through the other hole located on the opposite side.

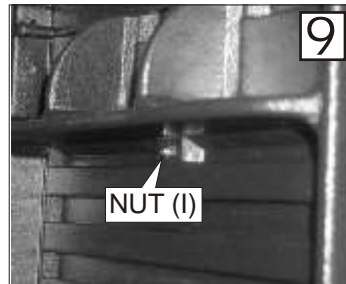


Re-insert the nut that you previously removed and tighten by hand or with pliers.

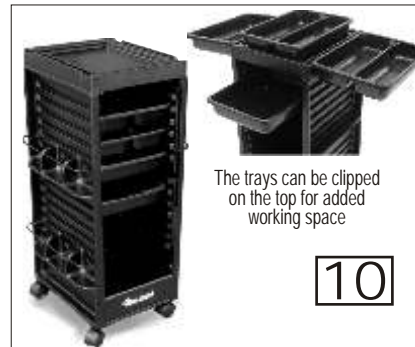

Take the trays (G) & slide in any track you like,



Should your unit be equipped with a lockable door, (L) unfold the door & slide the bottom half into the unit grooves as shown. Close the door, lock it and remove the keys.

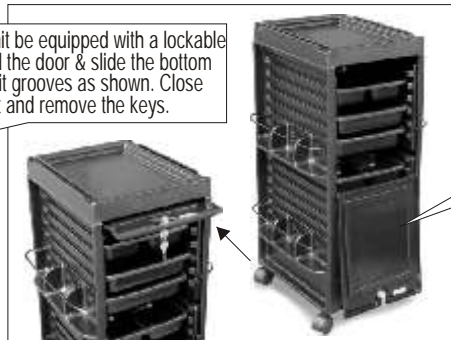

When you open the unit and remove the door you can store it away by sliding it folded into the first track or you may leave it half open and only access the top drawers.

